

| MODEL | STROKE TIME [s] FOR CONTROLLI VALVES (*) | | | POWER SUPPLY | CONTROL |
|--------|--|------|------|-----------------|---------|
| | 16,5mm | 25mm | 45mm | [Vac] | |
| MVH26 | 22 | 33 | 60 | 230Vac | 3р |
| MVH36 | | | | 24Vac | pot. |
| MVH46 | | | | | 3р |
| MVH56 | | | | | prop. |
| MVH36A | | | | | pot. |
| MVH36C | | | | | |

Note: MVH36A/C models are fitted with spring return device

(*) The time for 1 mm joint movement is 1,33 s. For timing related to different strokes use the following formula: time [s] = 1,33 x stroke [mm].

APPLICATION AND USE

MVH actuators have linear characteristic (linear ratio between input signal and valve coupling joint movement). They are used for fluid control in air-conditioning-heating systems and in industrial processes.

Three different control types are available:

- floating (3p)
- 165 Ohm proportional potentiometric (pot.)
- proportional (d.c. voltage or current)

They are designed for direct coupling on all CONTROLLI flanged globe valves (add AG62 linkage for V.B valves) and they can also be easily used on other manufacturers' valves with 0..45 mm stroke for floating action models or 10..45 mm stroke for proportional action models.

OPERATION

Actuators are fitted with an asynchronous bidirectional motor and with a torque limit device that makes the actuators self-adjusting on valves with a different stroke, ensuring - moreover - a constant force to the valve mechanical stroke-ends regardless of their position.

Voltage/current proportional models are also provided with both a feedback output signal indicating valve position and a device to select direct or reverse action.

All models are equipped with a manual control in order to override the actuator in case of control and/or power supply failure.

Note: do not use the actuator disassembled from the valve.

MANUFACTURING CHARACTERISTICS

The actuator consists in a die-cast aluminium housing, which includes mounting bracket and removable fire resistant terminal cover with captive bolts and a reduction gears supported by ball bearings. Movement is transmitted to a rack-and-pinion mechanism to which, through a suitable joint, the valve stem is connected.

Internal electronic card with easily accessible terminals for electrical connections. Micro end-switches operated by a torque limit device. Manual knob in thermoplastic material, fitted on the front side.

The actuator is maintenance-free.

Controlli S.p.A. 16010 Sant'Olcese (GE) Tel. 010 73 06 1 Fax. 010 73 06 870/871 www.controlli.eu



MANUFACTURING CHARACTERISTICS

Power supply: 24Vac +/-10%; 230Vac +/-10% (only

MVH26);
Consumption: 12VA;
Dimensioning: 15VA;
Frequency: 50-60Hz;

Stroke: 0-45mm (MVH26/46); 10-45mm (MVH36/56);

 Stroke time:
 see model table;

 Force:
 1500N (MVH);

 700N (MVHA/C);

Temperature:

- operation: -15T50°C; - storage: -25T65°C;

Allowed room humidity: Class R according to DIN 40040; Terminals: screw-type for wires from 1,5 to 2,5mm²

N. 2 cable gland: Ru

: Rubber-made punchable on hole D=20 mm, to be replaced by PG 13,5

compression glands; Protection degree: IP55 DIN 40050 (IEC 529);

for rooms with high pollution according

to IEC 730-1(93)/6.5.3;

Weight: 3kg (MVH); 4kg (MVHA/C);

Control signal:

- 3-point control: 2 SPST contacts;

- prop. control: potentiometric 165Ohm;- voltage (max 0.1mA): 8-11Vdc,4-7Vdc,6-9Vdc / 0-10Vdc, 2-10Vdc, 1-5Vdc/

0-16Vdc;

- current (2500hm): 4-20mA;

Outputs indication (solo per MVH36/56):

- voltage: 0-10Vdc (2mA max); 10-0Vdc(2mA max);

- current: 0-200µA;

The product complies the following directives: EMC 2014/30/UE according to EN61326-1 (emission and immunity)

LVD 2014/35/UE according to EN61010-1

All actuators can be connected to any controller, providing that the relevant output signal complies with the requirements at "Technical Characteristics" paragraph. Install a protection device compliant to existing rules with a 125mA intervention threshold and a minimum 3mm contact opening on the power supply line. The device is not supplied with the product.

ACCESSORIES

244 Stem heater for valves with AG62 *

248 Stem heater 24 V~, 50 W (for applications with fluid tem-

perature <-10 °C) *

AG62 Linkage kit for VMB and VSB valve assembly

DMVH 2 auxiliary microswitches (SPDT 10 (3)A-250 V~) adjustable

on the whole stroke. Microdisconnection type 1B according

to IEC 730-1 (93)/6.4.3.2

MVHPA2 Electronic card with 1kOhm auxiliary potentiometer for

MVH26

MVHPA4 Electronic card with 1kOhm auxiliary potentiometer for

MVH46

To state the max. resistance value among the potentiom-

eter terminals, refer to the table below:

| Stroke [mm] | wheels colour | aux. potentiometer max. value |
|-------------|---------------|----------------------------------|
| 16,5 | grey | 1000 Ohm |
| 25 | vybito | 700 Ohm |
| 45 | white | 1000 Ohm |


MVHT

Valve body-actuator spacer reducing the actuator direct exposure in case of installation with high-temperature fluids. Dimensions: Ø 120mm; h = actuator height + 102mm

GMVH Thermal insulation for MVH actuators *

* It is not possible to install both thermal insulation (Gxxxx) and stem

TERMINAL BOARDS

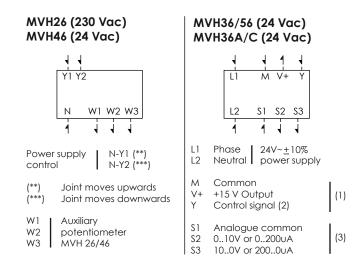


- 1) For the model MVH36. Connect the central of the controller potentiometer (165 ohm) to terminal Y, one side to terminal M and the other one to terminal V+.
- With jumper SW3 in A position and increasing control signal the joint moves upwards.
- 3) Connect the eventual indicator to the current input at terminals S3 (or S2) and S1 (max 2mA). Connect the indicator with voltage input to terminals S3 (or S2) and M (max 2mA). With joint up the voltage value (or current) corresponds to the minimum value.

INSTALLATION AND MOUNTING

The actuator can be mounted in the positions shown below. It is advisable to equip the motorized valve with MVHT spacer, in order to reduce the actuator working temperature in case of fluids at high temperatures (approximately > 120°C) in the valve body. For fluids over 160°C avoid mounting the actuator in vertical position on the valve so as to avoid the direct exposure to heat sources.

 Carry out the electrical connections by removing the cover, in compliance to existing standards. For valve mounting, follow the assembly instructions inside the package. If the equipment is used improperly, the protection provided by the device can be damaged.



Model with proportional signal (MVH56)

These actuators are factory supplied with 0-10Vdc control signal. To select different ranges, the jumper on SW1 should be moved from the position set to the one desired (see figure on the right). For 4-20mA range, it is necessary to position on SW2 both the SW1 jumper and the jumper set in DIP position.

In order to select the rotation direction, move the SW3 jumper from A to C position.

Model with electronic card for proportional-potentiometric signal (MVH36)


To reverse the rotation direction, exchange the connections at M and V+ terminals.

MANUAL OVERRIDE OPERATION


The manual control can be activated only after disconnecting power supply.

To use the manual control, it is necessary to push and hold down the knob; turn clockwise to move the valve stem downwards and counter clockwise to move it upwards (see below).


Be careful not to force the manual control when the actuator stroke end is reached.

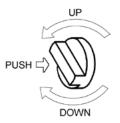

ELECTRONIC BOARD

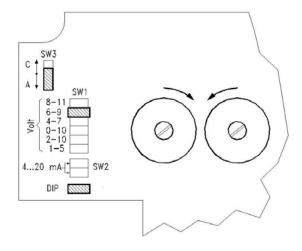

DBL328e

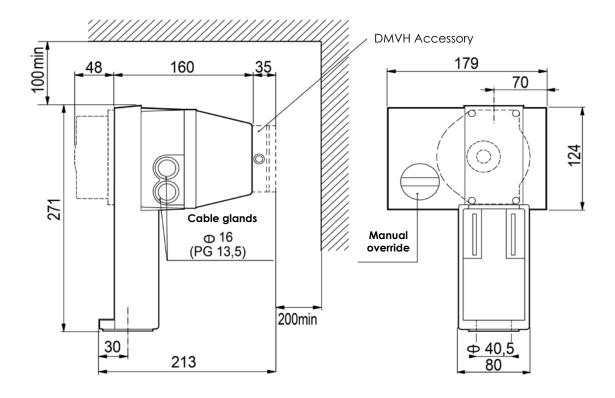

The performances stated in this sheet can be modified without any prior notice